




3.6 Installing Plow Blade

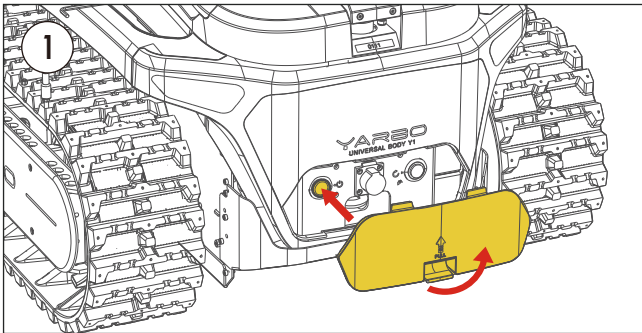


Remove the rear cover. **Press** the power button to turn off Yarbo. **Place** back the rear cover.

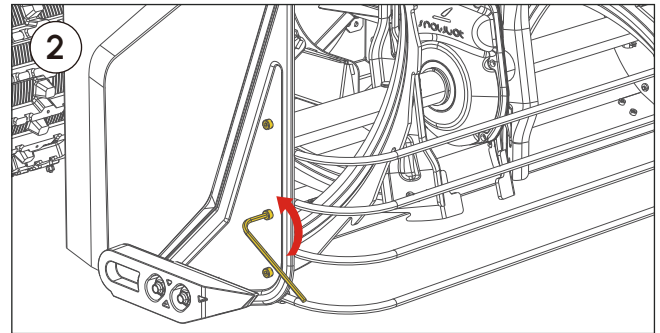


Unscrew the bolts in both sides of the protection fence using Allen Key #2 provided in the package.

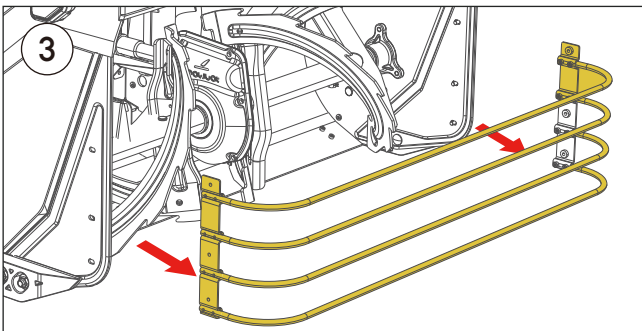

Remove the protection fence and safely **preserve** the bolts and fence.

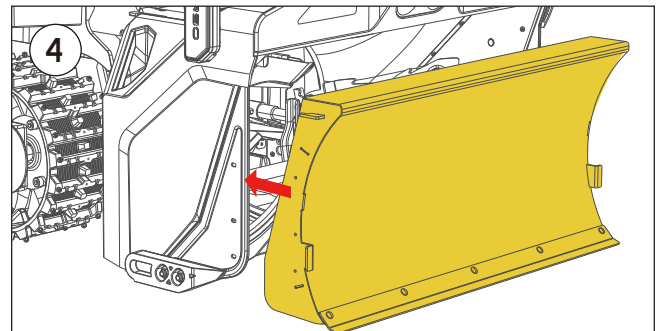

Align the notches on both sides of the Plow Blade with Wear Bar with the notches on the auger housing.

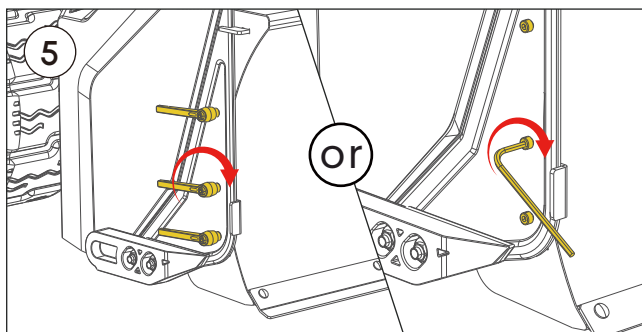

Locate six Tightening Bolts or Thumb Screw Bolts for Plow Blade. **Tighten** the bolts on the two sides using Allen Key #2 to **fasten** the Plow Blade.

WARNING


Two types of bolts are provided to fix the plow blade: Tightening Bolts for Plow Blade and Thumb Screw Bolts for Plow Blade. It is recommended to use Tightening Bolts for Plow Blade as they are less likely to deform and fall off.

3. Setup Guide


3.6.1 Replacing Wear Bar (optional)

WARNING


■ The wear bar is extremely sharp! Be careful!

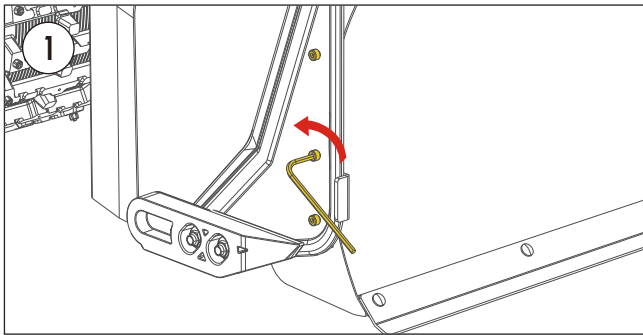


Unscrew the three Tightening Bolts for Plow Blade on each side of the auger housing using Allen Key #2.

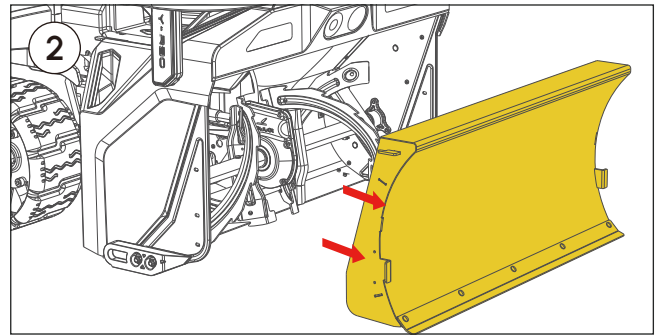

Remove the Plow Blade and **preserve** the bolts.

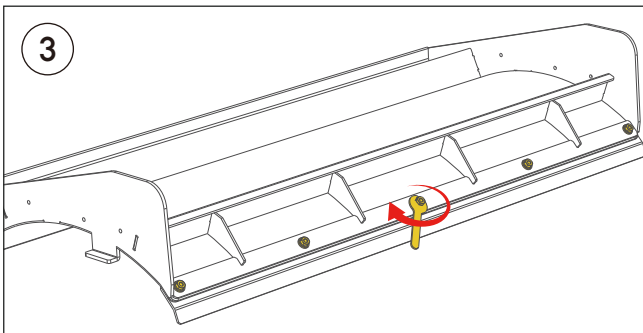


Place the Plow Blade horizontally. **Unscrew** the five Nuts with the Simple Wrench. **Press down** on the five Tightening Bolts for Wear Bar to remove them.

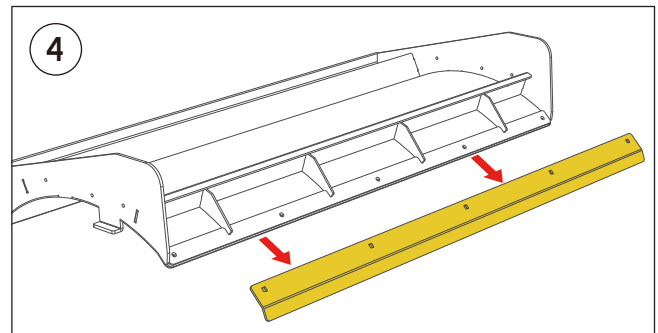


Remove the wear bar.


3. Setup Guide

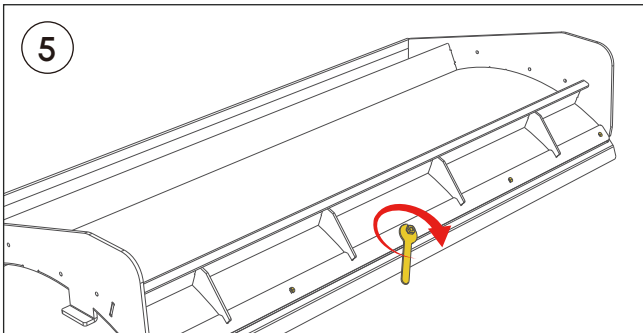

Locate the new Wear Bar in the package. **Screw** the five Tightening Bolts for the Wear Bar. **Screw** the five Nuts with the Simple Wrench.

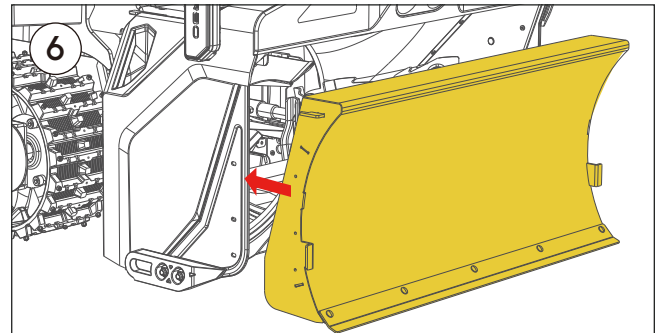

Align the notches on both sides of the Plow Blade with Wear Bar with the notches on the auger housing.

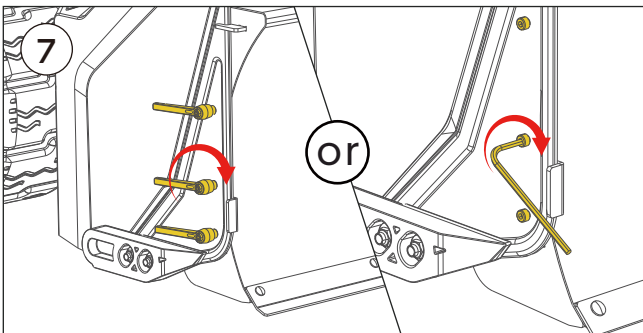

Locate six Tightening Bolts or Thumb Screw Bolts for Plow Blade. **Tighten** the bolts on the two sides using Allen Key #2 to **fasten** the Plow Blade.