



3. Setup Guide


3.5 Installing Snow Blower

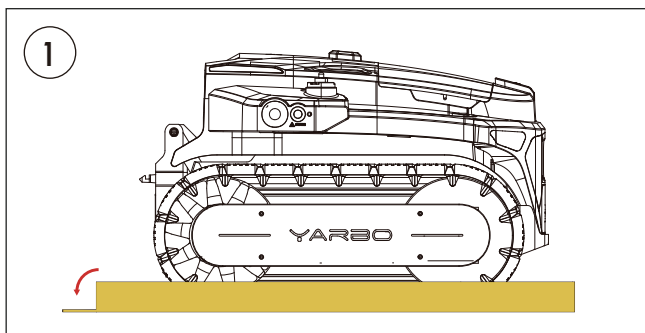


Cut the box along the cutting line on the bottom of the packaging box.

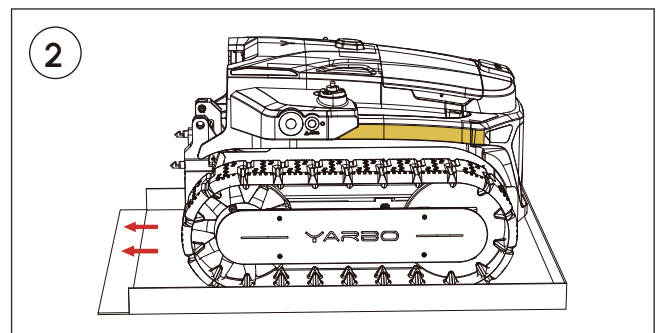

Grasp the lifting handles of the Yarbo Core and **push** the Yarbo Core out from the packaging box.

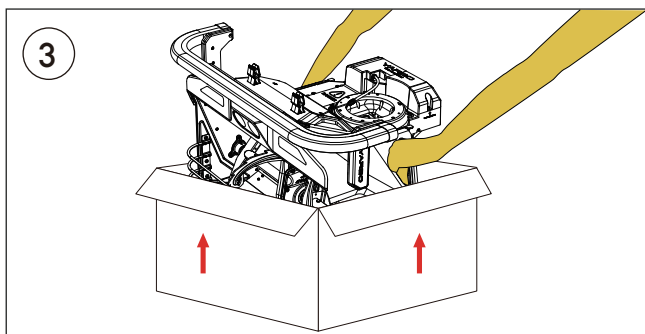


Carefully **lift** the Snow Blower Module out of the packaging box by grasping the handle at the **two sides** of the module.

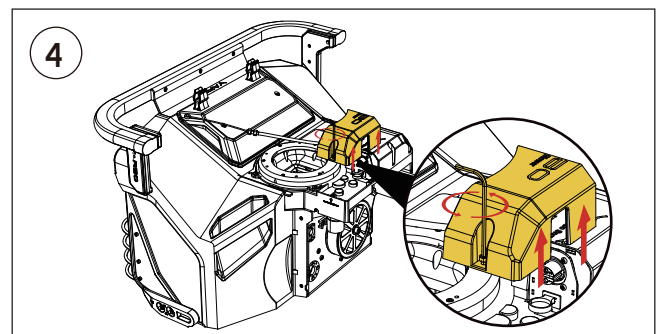


Remove cable protection cover by unscrewing the one connection screw using Allen Key#2.


3. Setup Guide

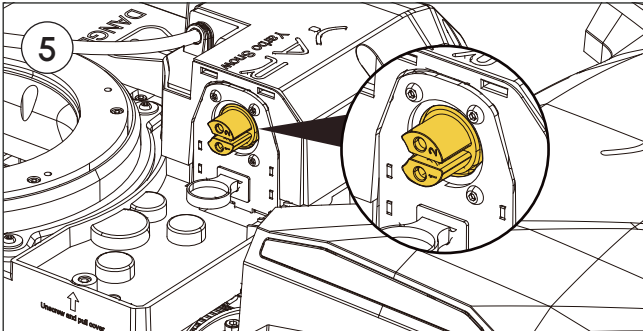


Locate the connection port under the removed protection cover.

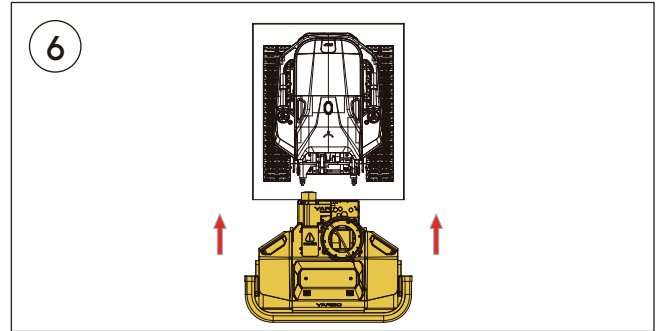


Position the Snow Blower Module next to the Yarbo Core and make sure they are close to each other. Do not connect these two parts now.

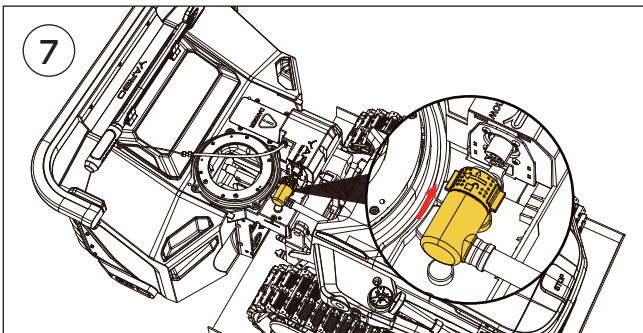


Locate the connection cable from the Yarbo Core and forcefully insert the connection cable to the port on the Snow Blower Module until you hear or feel a click.

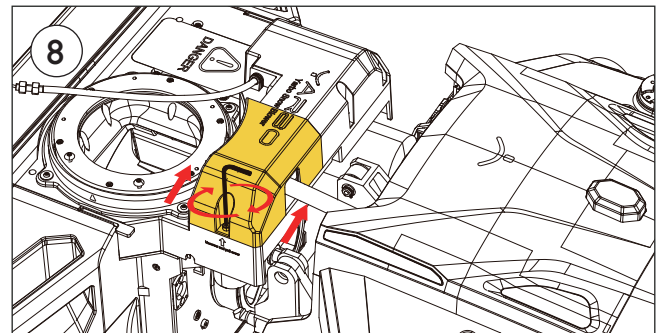

Place the protection cover back to its original position by putting it down on the track and sliding it to the end. Screw the connection screw to tighten the cover using Allen Key#2.

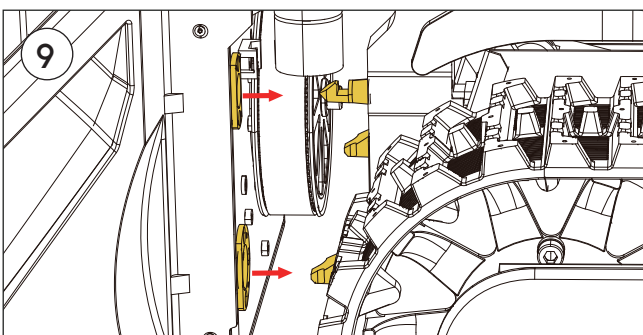


Locate the four shafts and holes. Do not push the two parts together right now.

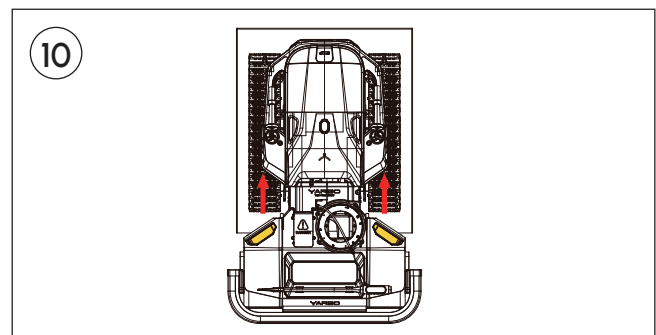


Slightly **raise** the Snow Blower Module. Gently push together two parts until you hear a click.


3. Setup Guide

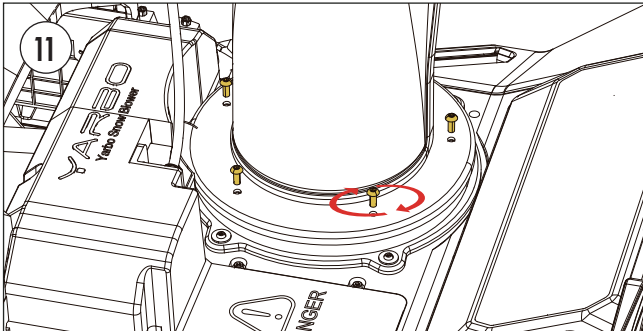


Locate the four Snow Chute Connection Bolts and the Snow Chute in the package. **Tighten** the **smaller bolts** to fasten the Snow Chute using Allen Key#1.

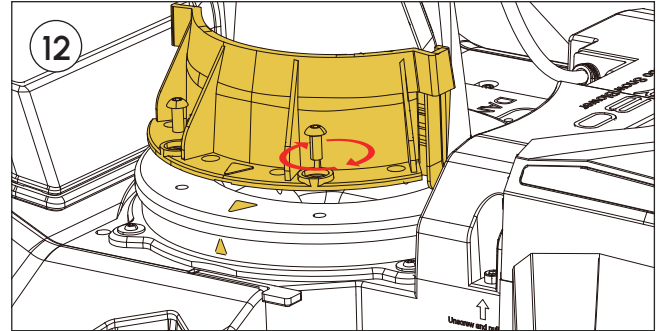


Locate the Snow Plume Diverter and the **two** Snow Plume Diverter Connection Bolts. **Tighten** the bolts to fasten the Snow Plume Diverter using Allen Key#2.

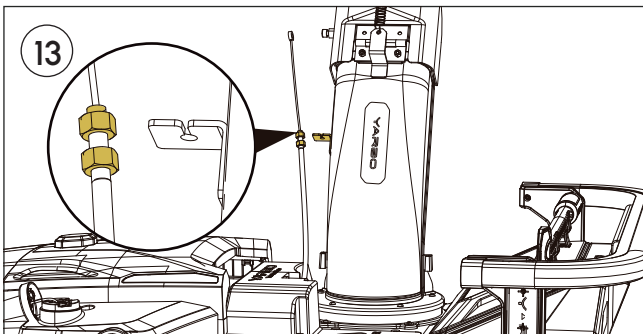


Locate the cable shown in the picture. Loosen the **top one** of the two nuts in the middle with Simple Wrench.

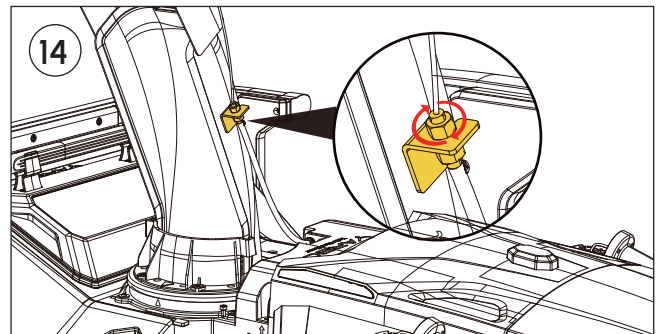

Place the cable in the open loop and screw the top nut with Simple Wrench to tighten the cable.

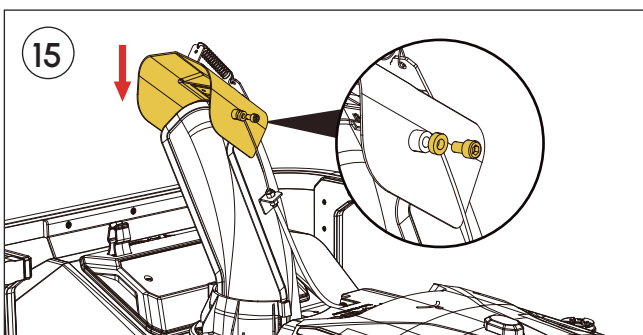


Unscrew the bolt shown in the picture. Press down the deflector on the chute. Insert the bolt through the ring at the end of the cable, and screw the bolt back in place using Allen Key#4.

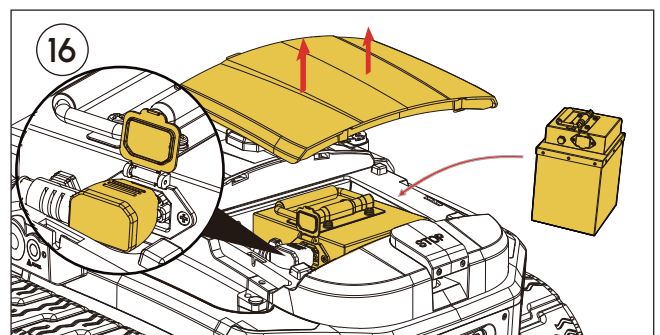


Remove the cover by grasping both sides with your hands and lifting. Place the battery inside the chamber and **connect** the cable from the Yarbo Core to the battery.


3. Setup Guide

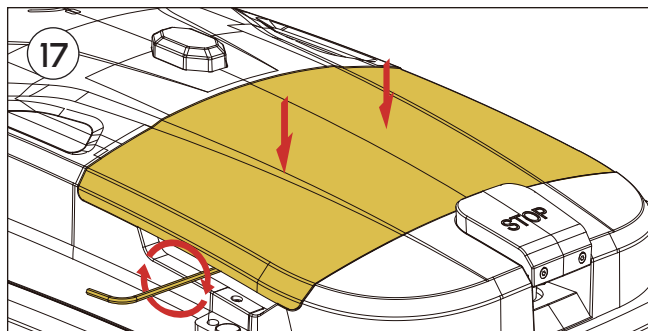


Replace the cover and **screw** the Anti-theft Bolts on both sides using Battery Cover Wrench provided in the package.

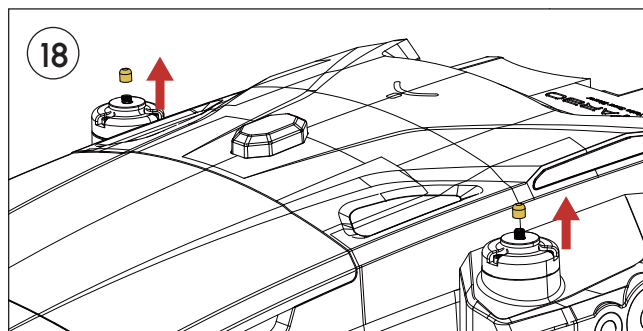


Locate the red screw caps on the RTK Antenna Mounts and **remove** them.

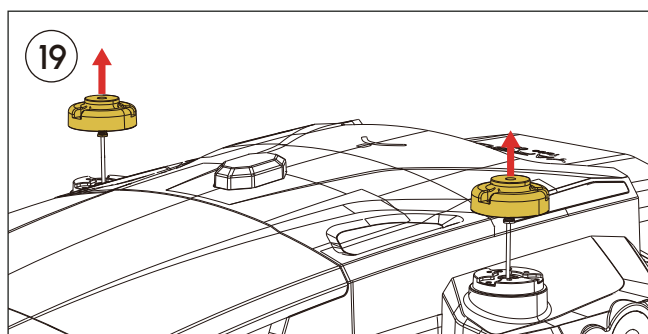


Locate the Low RTK Antenna Mounts and **unscrew** the connection bolts on both sides of the Yarbo Core by Allen Key#2. **Remove** the mounts gently.

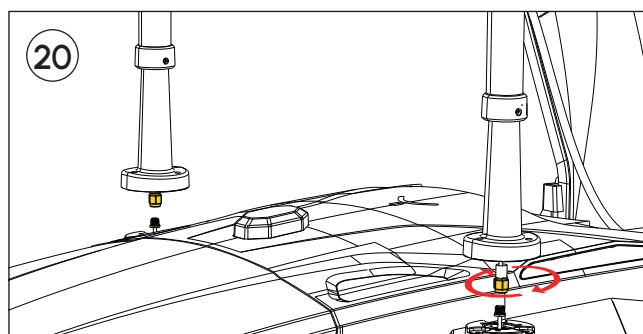

Take the High RTK Antenna Mounts out of the box and align them with the connection shaft on Yarbo Core.

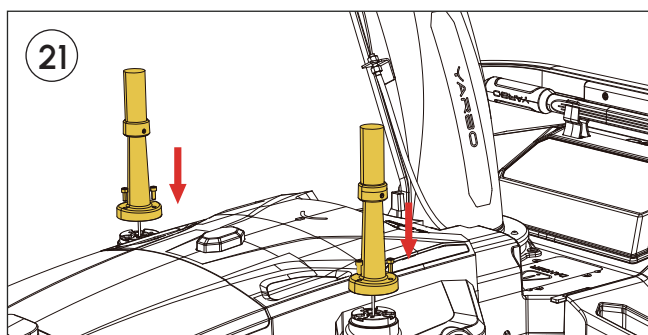


Locate six High RTK Antenna Mount Bolts provided in the package and **screw** them using Allen Key#2. Then **screw** RTK Antenna for Rover on the mounts.

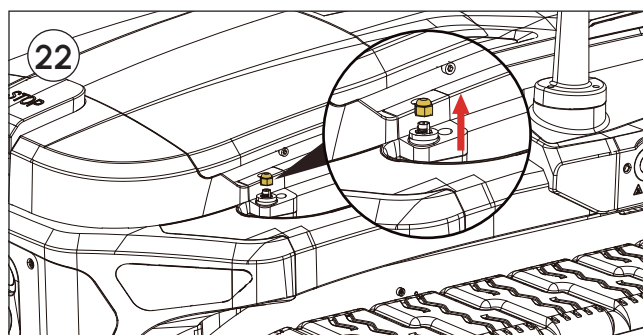


Remove the white screw cap on the HaLow Antenna Mount. **Keep** the black rubber ring in for waterproofing.


3. Setup Guide

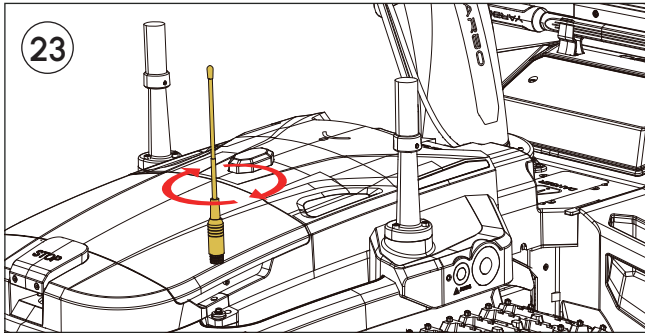


Locate the HaLow Antenna and **screw** the antenna into the HaLow Antenna Mount until hand tight.

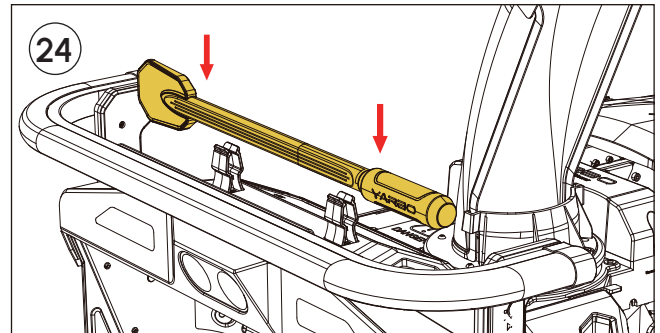

Place the snow shovel in front of the snow blower.

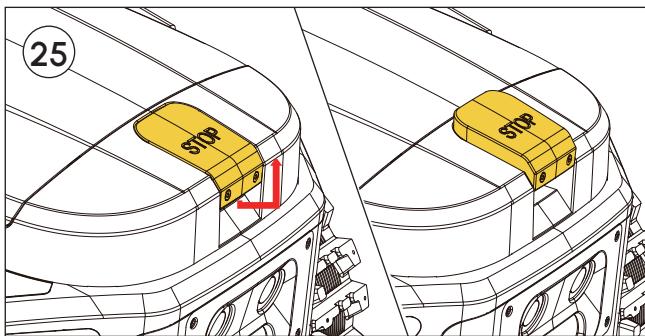

Lift the Emergency Stop Button.

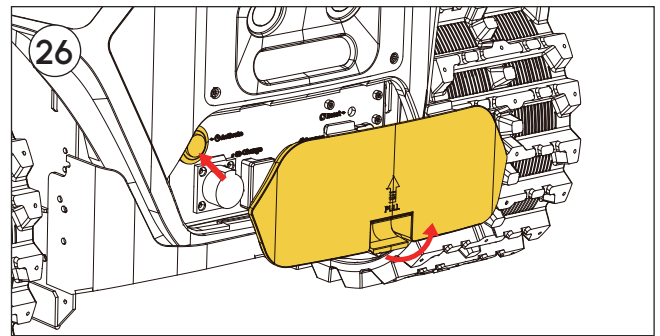

Remove the rear cover. **Press** the activate button to turn on Yarbo
Place back the rear cover.